
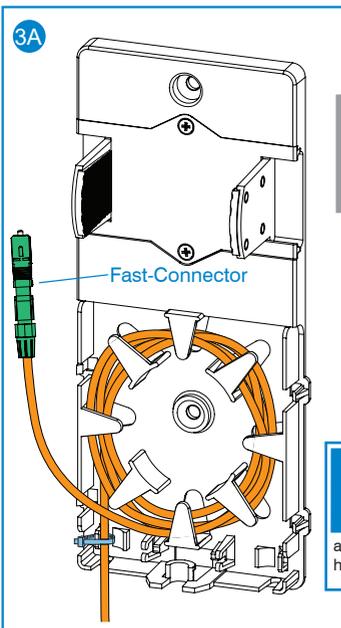
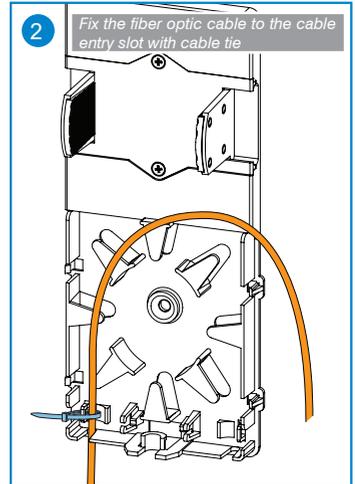
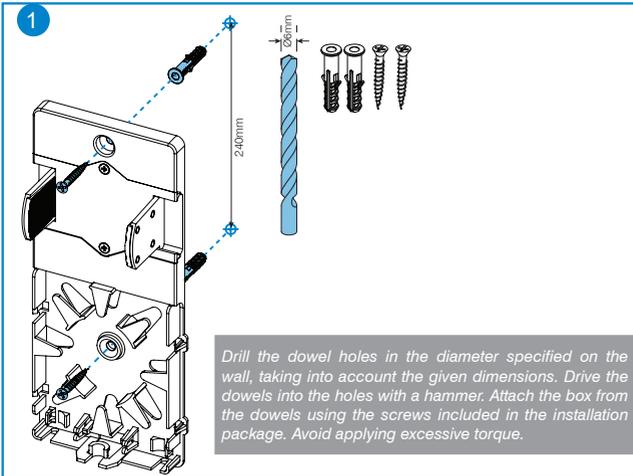


Mofe


IC: ASCT F6T T7TBPLO8F

ONT Holder Fiber Terminal



INSTALLATION GUIDE

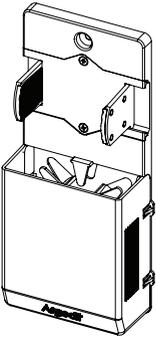

Terminate the fiber optic cable with fast connector (3A) or fusion splice method(3B). Wrap the excess cable in the reserve wrap area. Insert the fusion splice shield into the fusion splice holders.

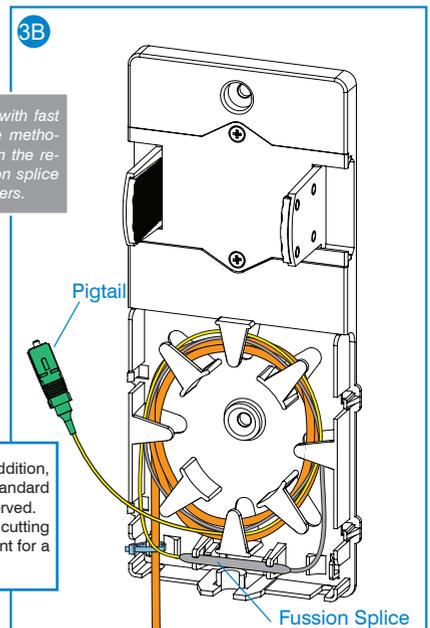

While doing fusion addition, fusion supplement standard rules should be observed. Cleaning the ends, cutting and peeling methods are important for a healthy connection.

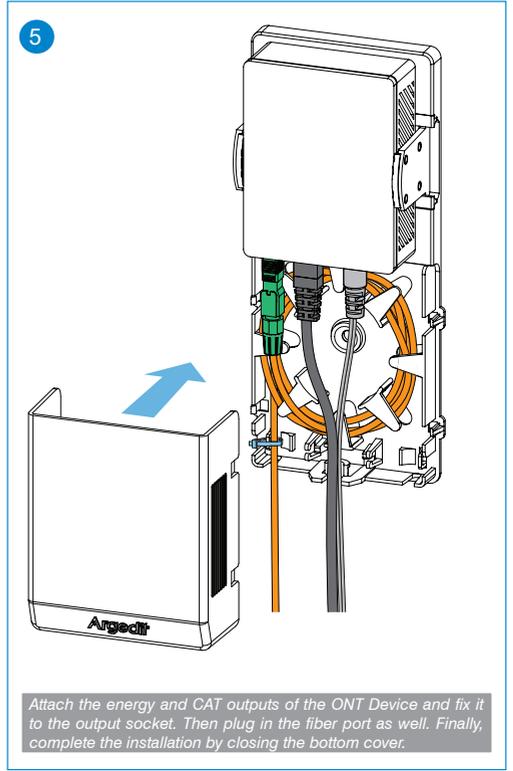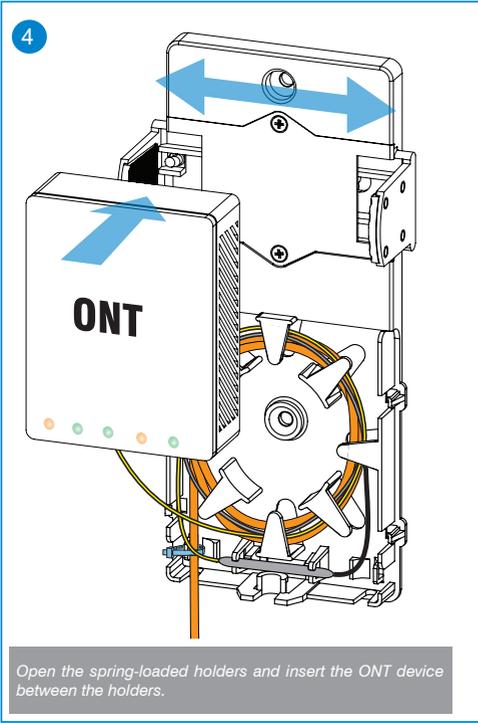

Technical Details

Specifics	Material	ABS
	Termination	Fast Connector or Fusion Splice
Dimensions	Width	85 mm
	Height	200 mm
	Depth	41 mm

Argedit

Argedit Telekomünikasyon Ltd. Şti.
Maviğöl Mah. 19 Mayıs Cad. No:8-1 Bolluca
Arnavutköy/ İSTANBUL / **TURKEY**

Tel: +90 212 294 87 83

Mail: bilgi@argedit.com

Web: www.argedit.com



Whatsapp: +90 554 586 34 48